



Use a SCOPE or a DVA multimeter to measure voltage at points 1,2,3
 DVA adapter : <https://transmic.fr/dva>

No measures are possible without special device at point 4